

'TORAY' Japan Oxygen Analyzers



Oxygen analyzers play a vital role in knowing the amount of Oxygen in the package which is important in maintaining the natural nutritional and textural standards of the product.


The measurement of oxygen content in the package helps in reducing growth of aerobic microorganisms and allows fresh packaged food to maintain its nutritional value and provides an extended shelf-life.

Zirconia Oxygen analyzer LC-450 F is developed for sampling inspection after gas filling based on our long experience in oxygen analyzer for food industry.

It can be easily measured only by sticking pen shaped sampling probe to package. It is best for sealing inspection inside the package of food, beverages or medicine, oxygen concentration measurement, sample inspection of the residual amount of oxygen in the deoxidized packaging etc.

Features:

- Requires small section of sample for testing
- New developed sampling probe realises the easy operation by sticking only
- Clean appearance
- Beep sound once test is complete
- Compliant with RoHS and low power consumption

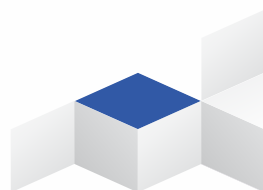

Technical Specifications :

Shape	Portable type
Display Method	Digital , 4 Digits
Measurement range	Auto range (0-1 % , 0-10% & 0-100%)
Warming time	Within 5 Min
Repeatability	+/- 1% FS A510
Sampling Method	Suction By pump
Sample Gas	approx 3 ml for injection
Weight	approx 4 Kg
Power Source	100-240 V Ac
Maximum Power Consumption	50 VA (constant 30 VA)

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-



Head Office :

Presto Stantest Private Limited

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India

P : +91 129 4272727 (100 Lines) E : info@prestogroup.com

• Faridabad • Kolkata • Mumbai • Pune • Ahmedabad • Chennai • Bangalore

