





Cupping Machine - PRIMA SERIES

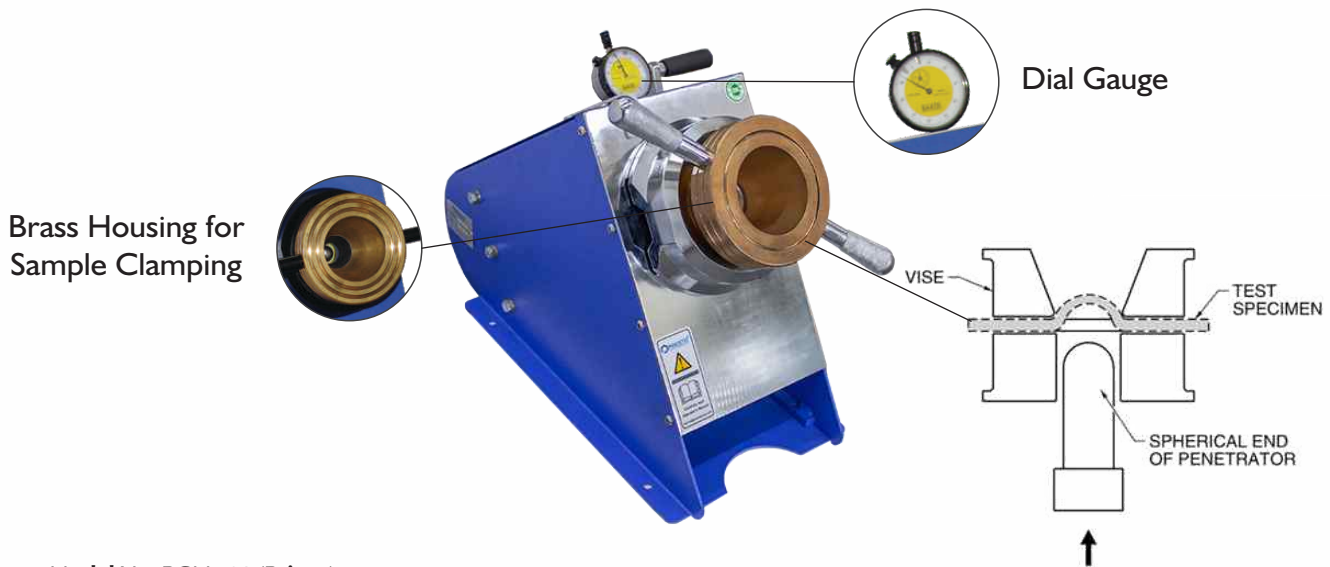


Model No. PCM - 02 (Prima)

Cupping Machine is a consistent tool useful for determining the draw ability of sheet metal components and non-ferrous metal sheets. Accurate and reliable testing of adhesion, hardness, porosity of coatings of paints or varnish in metal sheets, strips etc. in sheet metal, metallurgy, rubber industry. PRESTO Cupping Machine is designed as per standards IS: 10175 (Part I); 1993 & ISO 8490: 1986, ISO 1520:2006


- High Quality rugged structure with corrosion resistant main body
- Dial gauge to measure the cupping
- Sturdy Construction and resilient
- Revolving Handle for frictionless movement of punch
- Fast Guiding Mechanism with hand operated wheel
- Single handed hassle free operation with Spherical punch
- Brass Housing for strong sample clamping
- Highly accurate test results

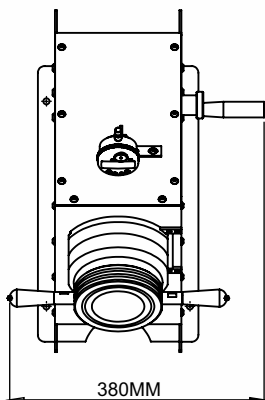

Top View

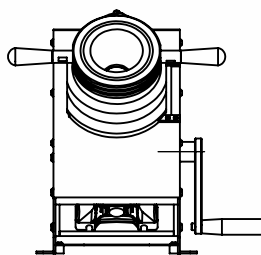

Front View

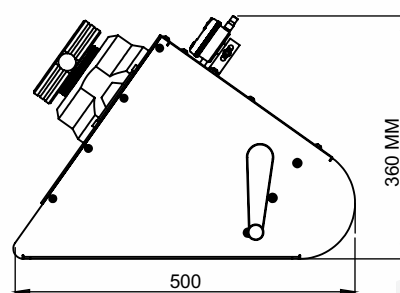

Side View





Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Sonipat • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad

www.prestogroup.com



Key Specifications:

Diameter of Punch	20 ± 0.2 mm
Range	Upto 25 mm
Least Count / Resolution	0.01 mm
Accuracy	± 2%
Sample Thickness	Upto 1.8 mm

Highlights:

Dial Gauge	1
Material of Main Body	Mild Steel
Dimensions	380 x 500 x 360 mm

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

					
Hot Air Oven	Humidity Chamber	Cupping Machine	Paint Impact Resistance Tester	Scratch Hardness Tester Motorised	Scratch Hardness Tester Hand Operated

www.prestogroup.com

