

## Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India P: 9210 903 903, +91 129 4272727, S 93111 24302 E: info@prestogroup.com



• Faridabad • Sonipat • Kolkata • Mumbai • Pune • Ahmedabad · Chennai · Bangalore · Hyderabad

www.prestogroup.com

# Polariscope Strain Viewer - Deluxe



#### Model No. PPS - 400

Polariscope Strain Viewer is a consistent tool that helps the manufacturer in testing the quality and transparency of PET preforms. It is based on the principle that any change in refractive index is due to different strain distribution and this leads to lower transparency of material.




- Sharper and clearer optical viewing experience.
- Standard Template for viewing sample at 45° and 90° angle.
- Large Viewing glass area.

With Polariscope Strain Viewer, not only can the molecular birefringent flow lines (fringes) be seen in color but the black isoclinic lines are visible when the preform axis is parallel to the polarizing axis of the viewer







**Complimentary: Preform Defect Chart** 

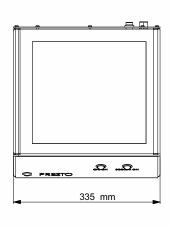

Top View

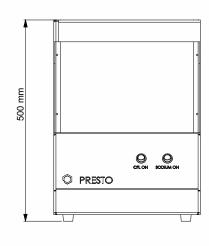

Front View

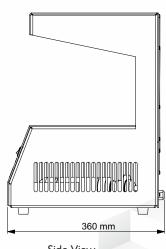

Side View



## Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India P: 9210 903 903, +91 129 4272727, S 93111 24302 E: info@prestogroup.com



• Faridabad • Sonipat • Kolkata • Mumbai • Pune • Ahmedabad Chennai
Bangalore
Hyderabad

www.prestogroup.com

### **Key Specifications:**

Viewing Area	260 x 240 mm
Display	Pictorial using preform defect chart.
Power	220V, Single phase, 50 Hz
Lights	CFL Light (Monochromatic light) Sodium Light
Standard Template Measuring Angle	45° and 90°

### **Highlights:**

Standard Template	1
Material	Mild Steel
Finish	Powder coated Havel Gray corrosion resistant finish
Dimensions	335x360x50mm

With the use of Monochromatic CFL light and Sodium light, user can observe the strain patterns in Pets, preforms etc.

#### **Optional Features:**

- Computerized models also available.
- Polariscope for Glass sample model also available.

Thank you customers for choosing us as your partners in growth!































### **OUR OTHER PRODUCTS:-**



<sup>\*</sup>All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.