


Impact Resistance Tester For Paints – Indirect




Model No. : PIR-69


Impact Resistance Tester for Paints - Indirect is a consistent tool useful for testing on coatings for crack formation; breaking off; adhesion and elasticity. A bulge is formed in the sheet metal by a falling weight with a hemispherical end. PRESTO Impact Resistance Tester for Paints - Indirect is designed as per **Standards** : ASTM D2794-93(2010), ISO 6272-1:2011.

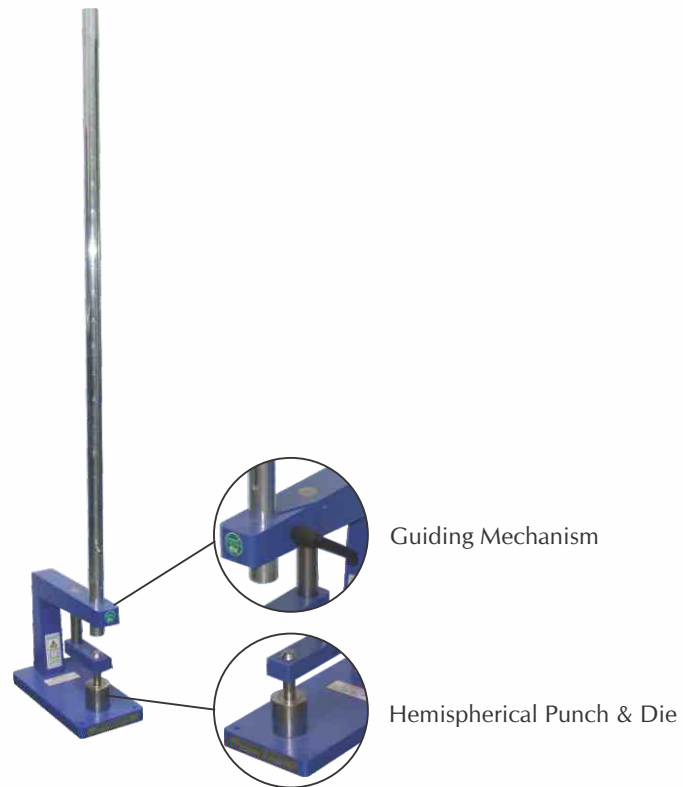


Top View

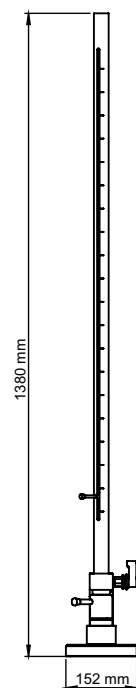

Front View

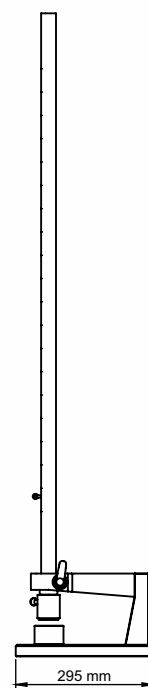

Side View

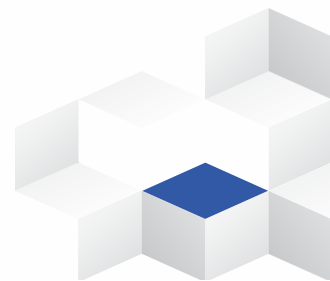

Features :

- High Quality rugged structure with corrosion resistant main body
- Provision of Punch to rest on the sample itself
- Single handed hassle free operation
- Separate weights provided to perform test
- Adjustable height of falling weights
- Fast Guiding Mechanism
- Highly accurate test results

Key Specifications:

Maximum Impact Height	1000 mm / 1 meter
Diameter of Punch	12.7 mm (15.9 mm optional)
Diameter of Die	16.3 mm
Maximum Weight	1000 gm / 2000 gm

Highlights:

Lift Mechanism	Manual (Through Pin)
Material of Main Body	Steel / Aluminium
Dimensions	152 x 295 x 1380 mm

PRESTO Impact Resistance tester for Paints In-direct is used mostly in Paint Industry. The energy of load exerted can be varied either by using different heights of fall or different dropping weights.

Coating attached to substrates are subjected to damaging impact during the manufacturing of Articles and their use in service.

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-



Head Office : Presto Stantest Private Limited

I-42, DLF Industrial Area Phase-I, Delhi Mathura Road, Faridabad 121003, Haryana, India
 P : +91 129 4272727 E : info@prestogroup.com

Branches :

Mumbai
 503-504B, Fair link Centre, Opp. Fame Adlab
 Behind Mongini's Off Link Road
 Andheri (West), Mumbai 400058
 P : +91 022 42957052, 42957053
 E : west@prestogroup.com

Kolkata
 93, 3rd Floor, Karnani Estate
 209, A.J.C. Bose Road
 Kolkata-700017. West Bengal
 P : +91 033 40612012
 E : east@prestogroup.com

Chennai
 A-3, First Floor, Sri Sathya Sai Building
 755, Poonamallee High Road, Kilpauk
 Chennai- 600 010. Tamil Nadu
 P : +91 044 43865260, 43838372
 E : south@prestogroup.com

